

# airworks®

## AIR FRESHENER

### mounting instructions

Double coated foam tape is provided for easy mounting

1. Use key to remove lock assemble on the side of dispenser (do not separate key from plug assembly).
2. Press top button to open dispenser.
3. Pull hinged cover down from top.
4. Position dispenser in desired location. Recommended height is 7 feet (2.1 M) from floor and away from ventilation. (one dispenser can service up to 6000 cubic feet)
5. Mark 2 holes on wall with pencil using the back plate as a template.
6. Drill marked holes with 3/16 drill bit.
7. Insert plastic anchors provided and push completely into holes.
8. Turn screws in anchors, leaving enough clearance for thickness of dispenser wall.
9. Select the desired operation mode with 2 inner switches (see below).
10. Insert two (2) AA batteries into unit and it is recommended to use alkaline batteries for longer usage (batteries not included).
11. Close cover (secure lock).

### setting instructions

**Step 1:** Select spray time interval

**DEMO** Self-test (spray every 5 seconds)

**25** Every 25 minutes between sprays

**15** Every 15 minutes between sprays

**8** Every 8 minutes between sprays

**Step 2:** Select day-working-hour-mode

**DAY** Operate only in the presence of a light source

**24** Runs 24 hrs. (full-day)

**12** Runs 12 hrs. (half-day)

**OFF** Power off

Recommended for the operation of a 30 day cycle

**15** 15 min for full-day operation)

**8** 8 min for half-day operation

**Step 3:** Insert two (2) AA batteries (batteries not included).

**Step 4:** Insert new aerosol refill with nozzle centered in opening.

**Step 5:** Close cover (secure lock). Flashing red light indicates power is on.

#### CAUTION

Ensure to switch power OFF before proceeding. Do not stand in front of dispenser in order to avoid spraying on to the face.

**REORDER# AWMADL**